



**AT31F/AT61F Online Temperature
Measurement Thermal Camera
User Manual V1.0.5**



IRay Technology Co., Ltd.

www.infiray.com

Explore And Perceive The Future

Introduction to IRay Technology

IRay Technology Co., Ltd. concentrates on developing infrared thermal imaging technologies and manufacturing relevant products, with completely independent intellectual property rights. IRay is committed to providing global customers with professional and competitive infrared thermal imaging products and solutions. The main products include IRFPA detectors, thermal imaging modules, and terminal thermal imaging products.

With R&D personnel accounts for 48% of all employees, 662 intellectual property projects in terms of IRay have been authorized and accepted: 522 patented technologies authorized and accepted in China (including those for integrated circuit chips, MEMS sensors design and manufacture, Matrix III image algorithms and intelligent precise temperature measurement algorithms, etc.); 16 patented technologies authorized and accepted overseas; 86 software copyrights; and 38 integrated circuit layout designs. (The statistic data is up to April,2021)

IRay products have been applied in various fields, including epidemic prevention and control, industrial thermography, security and fire control, night vision observation, automatic driving, Internet of Things, AI, and machine vision.

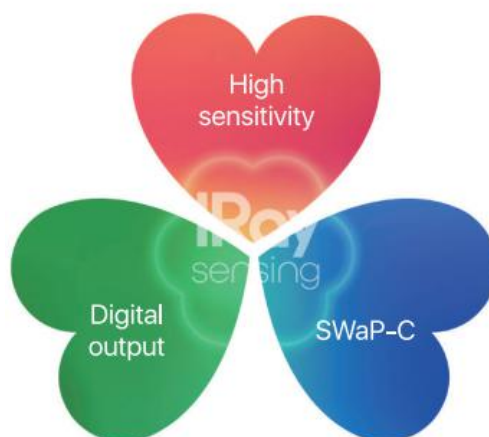


Table of Contents

1. Legal Disclaimer	1
1.1 Legal Disclaimer.....	1
1.2 Copyright.....	1
1.3 Quality Assurance.....	1
2. Safety Information	2
3. Notice to user	3
3.1 Calibration.....	3
3.2 Accuracy.....	3
3.3 Video Teaching.....	3
3.4 Documentation Updates.....	3
4. Customer Help	3
4.1 FAQ.....	3
4.2 Download.....	3
5. Product Introduction	4
6. Product Figure and Explanation	5
7. Product Models Reference	6
8. Product Application Scenarios	7
9. Lens Parameters	8
10. Quick Start Guide	9
11. Product and Accessories List	11
12. Cable Strain Relief	12
13. Technical Data	13
13.1 AT31F.....	13
13.2 AT61F.....	16
14. Pin Definition	19
15. Mechanical Drawings	20
16. Common Troubleshooting	21
17. Cleaning Thermal Camera	22
17.1 Cleaning Camera Housing, Cables and Other Items.....	22
17.2 Cleaning Infrared Lens.....	23
18. Terms and Definitions	24
Appendix A Emissivity of Common Materials	25

1. Legal Disclaimer

1.1 Legal Disclaimer

The thermal cameras manufactured by IRAY TECHNOLOGY are warranted for a period of two-year and the accessories are warranted for a period of three-month form the delivery date of the original purchase, provided such products have been under normal storage, use and maintenance.

This warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has be subjected to misuse, neglect, accident or abnormal conditions of operation.

In the case of a defect in a product covered by this warranty the product must not be further used or maintained in order to prevent additional damage. The purchaser shall promptly report any defect to IRAY TECHNOLOGY or this warranty will not apply.

IRAY TECHNOLOGY will, at its option, repair or replace any such defective product free of charge if, upon inspection, the product or accessories prove to be defective, the user can contact with after-sales service department of IRAY TECHNOLOGY within the said warranty period.

1.2 Copyright

©IRay Technology Co., Ltd. 2020. All rights reserved worldwide. All contents in this manual, including words, pictures, images, etc., belong to IRAY TECHNOLOGY CO., LTD. (Hereinafter referred to as “THE COMPANY” or “IRAY TECHNOLOGY”). No part of the manual, in whole or part, may be copied, photocopied, translated, or transmitted without the prior written permission of IRAY TECHNOLOGY.

This manual is used as a guide. The photos, graphics, diagrams and illustrations provided in the manual are only used to explain, which may be different from the specific product. The real product shall prevail. We try our best to make sure the contents in this manual are accurate. We do not provide any representations or warranties in this manual.

IRAY TECHNOLOGY reserve the right to update the manual. If you need the latest version of this manual, please contact us. It is recommended that you use this manual with the guidance of professionals.

1.3 Quality Assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO9001 standard.

We reserve the right to make changes and improvements on any of the products without prior notice.

2.Safety Information



WARNING

1. Make sure you read all applicable Material Safety Data Sheets (SDS) and warning labels on containers before you use a liquid. The liquids can be dangerous. Injury to persons can occur.
2. It is prohibited to use the product in a high temperature above 85 °C or in a low temperature below-45 °C.
3. It is forbidden to disassemble or refit the thermal camera at will.



CAUTION

1. No matter there is a lens cover or not, do not point the infrared thermal camera towards strong light or equipment with laser radiation. This will affect the accuracy of the thermal camera and even damage the detector in the thermal camera.
2. Do not use the product under conditions that doesn't match the environmental requirements. For specific use environment requirements, see the product parameter table.
3. Do not apply solvents or equivalent liquids to the camera, the cables, or other items.
4. Be careful when you clean the infrared lenses. The lens has an anti-reflective coating which is easily damaged. Damage to the infrared lens can occur with too much force or cleaning with rough objects such as tissues.

3. Notice to user

3.1 Calibration

IRAY TECHNOLOGY recommends that you verify your calibration yearly in order to ensure accuracy. You can verify the calibration through IRAY TECHNOLOGY or third-party organizations.

3.2 Accuracy

For very accurate results, we recommended that you wait 30 minutes after you have started the camera before measuring a temperature.

3.3 Video Teaching

You can search for mount and use videos from our website.

3.4 Documentation Updates

Our manuals are updated several times per year, and we also issue product-critical notifications of changes on a regular basis. Please visit our website to access the latest manuals and notifications.

4. Customer Help

4.1 FAQ

You can find answers to FAQ about this model on the service support page of our official website.

4.2 Download

You can download the following contents from our website: www.infiray.com

Product Documentation

Client Software

Video Teaching Courses


5.Product Introduction



Main Features	Compact Size
	Quick Installation
	Several optional lenses
	I/O Alarm
	Simultaneous output of temperature data and image data

Typical Applications	Power detection
	Industrial detection
	Environmental Monitoring
	Fire Warning

6.Product Figure and Explanation

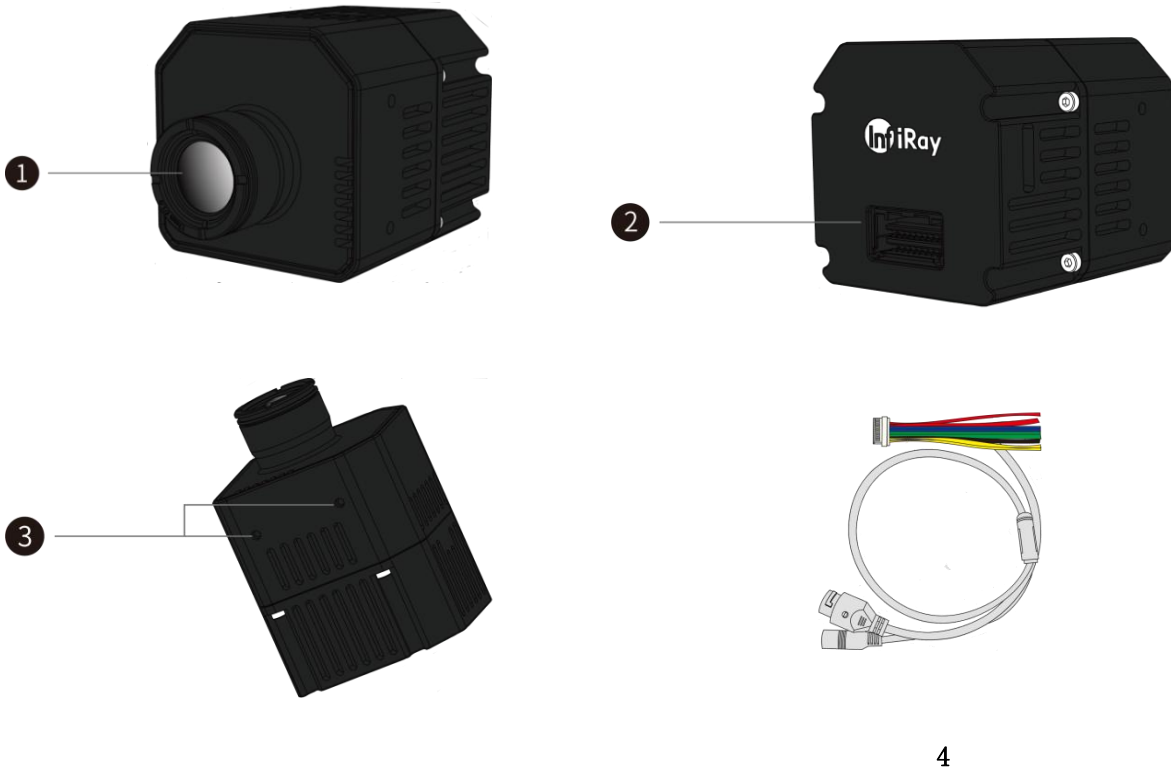

No.	Explanation
1	infrared lens
2	power/data interface
3	mounting screw holes
4	ATF connecting cable

Table 6.1 Explanation of Product Appearance


7.Product Models Reference

AT31F	3	X
Model	Lens	Reserved
AT31F	1: 4mm 2: 6.2mm 3: 9.7mm 4: 13mm 5: 19mm 6: 25mm 7: 35mm 8: 50mm	X
AT61F	1: 4.1mm 2: 5.8mm 3: 9.1mm 4: 13mm 5: 19mm 6: 25mm 7: 35mm 8: 55mm	X

Table 7.1 Product Models List

E.G.: AT31F3X(AT21F-3-X) stands for AT31F with 9.7mm lens.

8.Product Application Scenarios

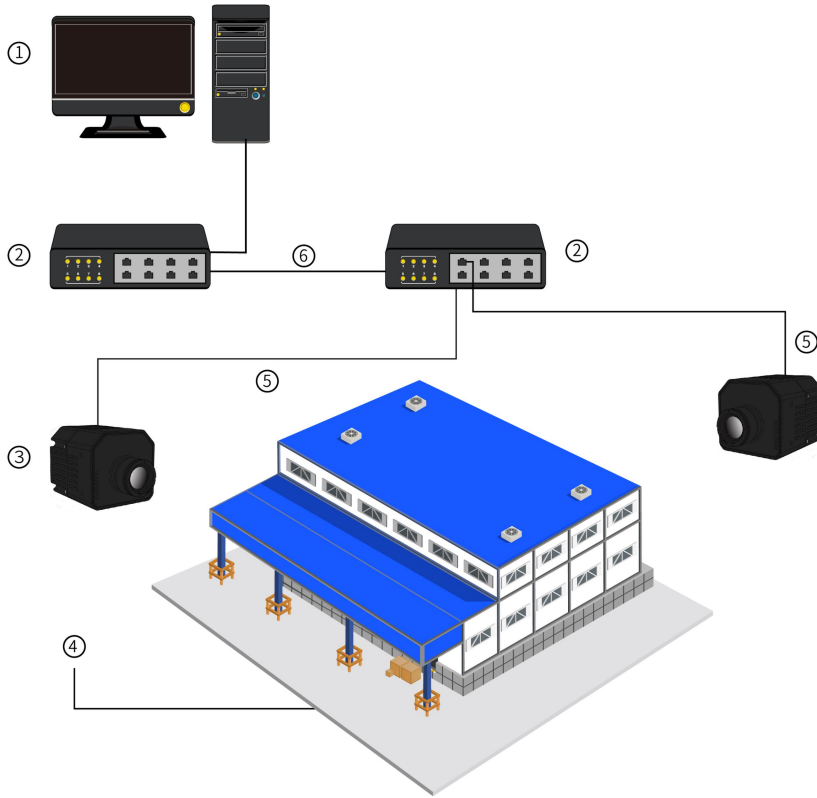

No.	Descriptions
1	PC/Display
2	Exchanger
3	Thermal camera
4	The detected area (for example warehouse, machine room etc.)
5.6.	Cables

9. Lens Parameters

Resolution	Focal Length	FOV (H×V)	IFOV
384×288	4mm	90.3°×68.7°	4.250mrad
384×288	6.2mm	61.5°×45.7°	2.742mrad
384×288	9.7mm	37.9°×28.7°	1.753mrad
384×288	13mm	28.2°×21.3°	1.308mrad
384×288	19mm	19.5°×14.7°	0.895mrad
384×288	25mm	14.9°×11.2°	0.680mrad
384×288	35mm	10.6°×8°	0.486mrad
384×288	50mm	7.4°×5.6°	0.340mrad

Table 9.1 AT31F Lens Parameters

Resolution	Focal Length	FOV (H×V)	IFOV
640×512	4.1mm	89.8°×75.7°	2.92mrad
640×512	5.8mm	70°×57°	2.06mrad
640×512	9.1mm	48°×38°	1.31mrad
640×512	13mm	33.5°×26.9°	0.92mrad
640×512	19mm	22.9°×18.4°	0.63mrad
640×512	25mm	17.4°×14°	0.48mrad
640×512	35mm	12.5°×10°	0.34mrad
640×512	55mm	8°×6.4°	0.21mrad

Table 9.2 AT61F Lens Parameters

10.Quick Start Guide

Please follow the steps:

1.Install IRT_VMS if the thermal camera is with other networking equipments, and IRT_TAS_AT can be installed on a single thermal camera for temperature measurement and analysis. The software may have version updates. Please refer to the actual version. It is recommended that the computer configuration for installing the software meet the following conditions:

- 1.) i5-9500T and above CPU
2.)8G and above memory
3.)64-bit Win10 system,
- 4.) Main board H370 chip set
- 5.) Support Gigabit network.
6.)The screen resolution is recommended to be 1920×1080
- 7.) Video Memory 128MB
- 8.) Network card RTL8168/8111/8112 Gigabit Ethernet Controller

2.Connect the thermal camera, power supply and computer.

3.Set the computer configurations according to the software instructions for IRT_VMS_User Manual or IRT_TAS_AT_User Manual, change the IP to 192.168.1.×××.(Do not choose 123 or 29 to avoid connection failure for the same IP with the camera.

4.Double-click the client icon, enter the correct user name and password, and click login to start the client.

5.Select the IP on the client homepage, and add the module number you want to preview to the PC preview interface. If the thermal camera is successfully connected, you can start imaging and monitoring with the thermal camera.

6.The 232 transmission between the computer and the thermal camera can be realized through the RS232 interface on the cable.

7.The 485 transmission between the thermal camera and the PT can be realized through the RS485 interface on the cable to control the PT.

8.The ALARMIN interface on the cable can be used to manually input signals to trigger the alarm.

9.The I/O alarm output of the thermal camera can be realized through the ALARMOUT interface on the cable. Non-alarm information remains high, and becomes low when there is alarm information. After the alarm disappears, it will continue to be maintained for 30 seconds and then return to high level.

10. The client software TAS and VMS are applicable for the thermal camera, which can realize other functions needed.

The client software TAS can realize the below functions:

- Image capture and video recording
- Thermographic analysis/secondary analysis
- Export recorded infrared data
- Set the parameters and alarm information
- Update firmware to acquire the new functions

The client software VMS can realize the below functions:

- Multiple thermal camera monitoring
- Set parameters and alarm information of a certain thermal camera
- Get the information in the alarm region

11.Product and Accessories List


Product and Accessories
ATF online temperature measuring thermal camera
ATF dedicated cable

Table 11.1 Product and Accessories List


12.Cable Strain Relief

In installations where the camera is subject to vibrations or shocks the power cord may need an external strain relief arrangement to avoid power port failure.

The following pictures show two examples on how cable strain relief of the power cord can be solved.

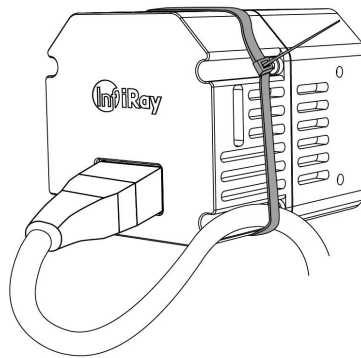

Example 1 Cable strain relief with zip ties

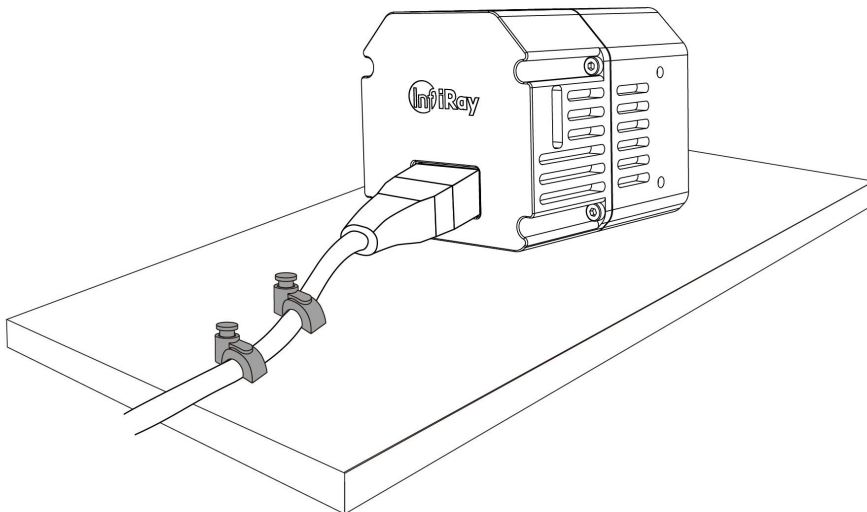

Example 2 cable strain relief with cable clamps

13. Technical Data

13.1 AT31F

Imaging and Optical Data	
Resolution	384×288
Thermal Sensitivity/NETD	<50mK(40mK is optional) @25°C, F#1.0
Image Frequency	50Hz

Detector Data	
Detector Type	VOx, Uncooled FPA detector
Spectral Range	8~14μm
Pixel	17μm

Temperature Measurement	
Object Temperature Range	-20°C ~ 150°C 0°C ~ 550°C
Accuracy	±2°C or ±2%
Measurement Tools	Any fixed point Full screen max./min. temperature capture Center spot Line/Area analysis tool Manually choose temperature width

Interface	
Analog Video Output	1 channel video
Network Output	RJ45 10M/100M/1000M adaptive
Alarm Interface	1 output, 1 input
Network Protocol	Ethernet/IP, TCP, UDP, SNTP, RTSP, HTTP, ICMP, SMTP, DHCP, UPnP, PPPOE
Ethernet	Control and transmit images
Interface Protocol	Modbus TCP, ONVIF and GB28181 are supported
Serial Communication Interface	RS-485(control PT)
	RS-232(network data)

Image Adjustment	
Polarity	Black hot/white hot
Palette	18 palettes are available

Compression Standard	
Compression Standard for Videos	H.264/H.265
Video Format	MP4, mov

Physical Data	
Weight(without lens)	<150g
Thermal Camera without lens (L×W×H)	46.5mm×48mm×83mm

Alarm	
Alarm Function	Area, line and other individual alarms are configurable and support external equipment to trigger alarms
Alarm Output	I/O output, log, and save image

Power System	
Typical power consumption@25°C	≤3W
Connector type for external power supply	DC
Voltage	9-26VDC
Power Protection	Support reverse connection protection

Environmental Data	
Operating Temperature Range	-20°C ~ 60°C
Storage Temperature Range	-40°C ~ 70°C
Humidity (operating & storage)	5%~95%RH(no condensation)
Shock	30g,11ms, all axial
Vibration	4.3g, random vibration, all axial

Table 13.1.1 AT31F Performance Parameters

13.2 AT61F

Imaging and Optical Data	
Resolution	640*512
Thermal Sensitivity/NETD	<50mK(40mK is optional) @25°C, F#1.0
Image Frequency	25Hz

Detector Data	
Detector Type	VOx, Uncooled FPA detector
Spectral Range	8~14μm
Pixel	12μm

Temperature Measurement	
Object Temperature Range	-20°C ~ 150°C 0°C ~ 550°C
Accuracy	±2°C or ±2%
Measurement Tools	Any fixed point Full screen max./min. temperature capture Center spot Line/Area analysis tool Manually choose temperature width

Interface	
Analog Video Output	1 channel video
Network Output	RJ45 10M/100M/1000M adaptive
Alarm Interface	1 output, 1 input
Network Protocol	Ethernet/IP, TCP, UDP, SNTP, RTSP, HTTP, ICMP, SMTP, DHCP, UPnP, PPPOE
Ethernet	Control and transmit images
Interface Protocol	Modbus TCP, ONVIF and GB28181 are supported
Serial Communication Interface	RS-485(control PT)
	RS-232(network data)

Image Adjustment	
Polarity	Black hot/white hot
Palette	18 palettes are available

Compression Standard	
Compression Standard for Videos	H.264/H.265
Video Format	MP4, mov

Physical Data	
Weight(without lens)	<150g
Thermal Camera without lens (L×W×H)	46.5mm×48mm×83mm

Alarm	
Alarm Function	Area, line and other individual alarms are configurable and support external equipment to trigger alarms
Alarm Output	I/O output, log, and save image

Power System	
Typical power consumption@25°C	≤3W
Connector type for external power supply	DC
Voltage	9-26VDC
Power Protection	Support reverse connection protection

Environmental Data	
Operating Temperature Range	-20°C ~ 60°C
Storage Temperature Range	-40°C ~ 70°C
Humidity (operating & storage)	5%~95%RH(no condensation)
Shock	30g,11ms, all axial
Vibration	4.3g, random vibration, all axial

Table 13.2.1 AT61F Performance Parameters

14.Pin Definition

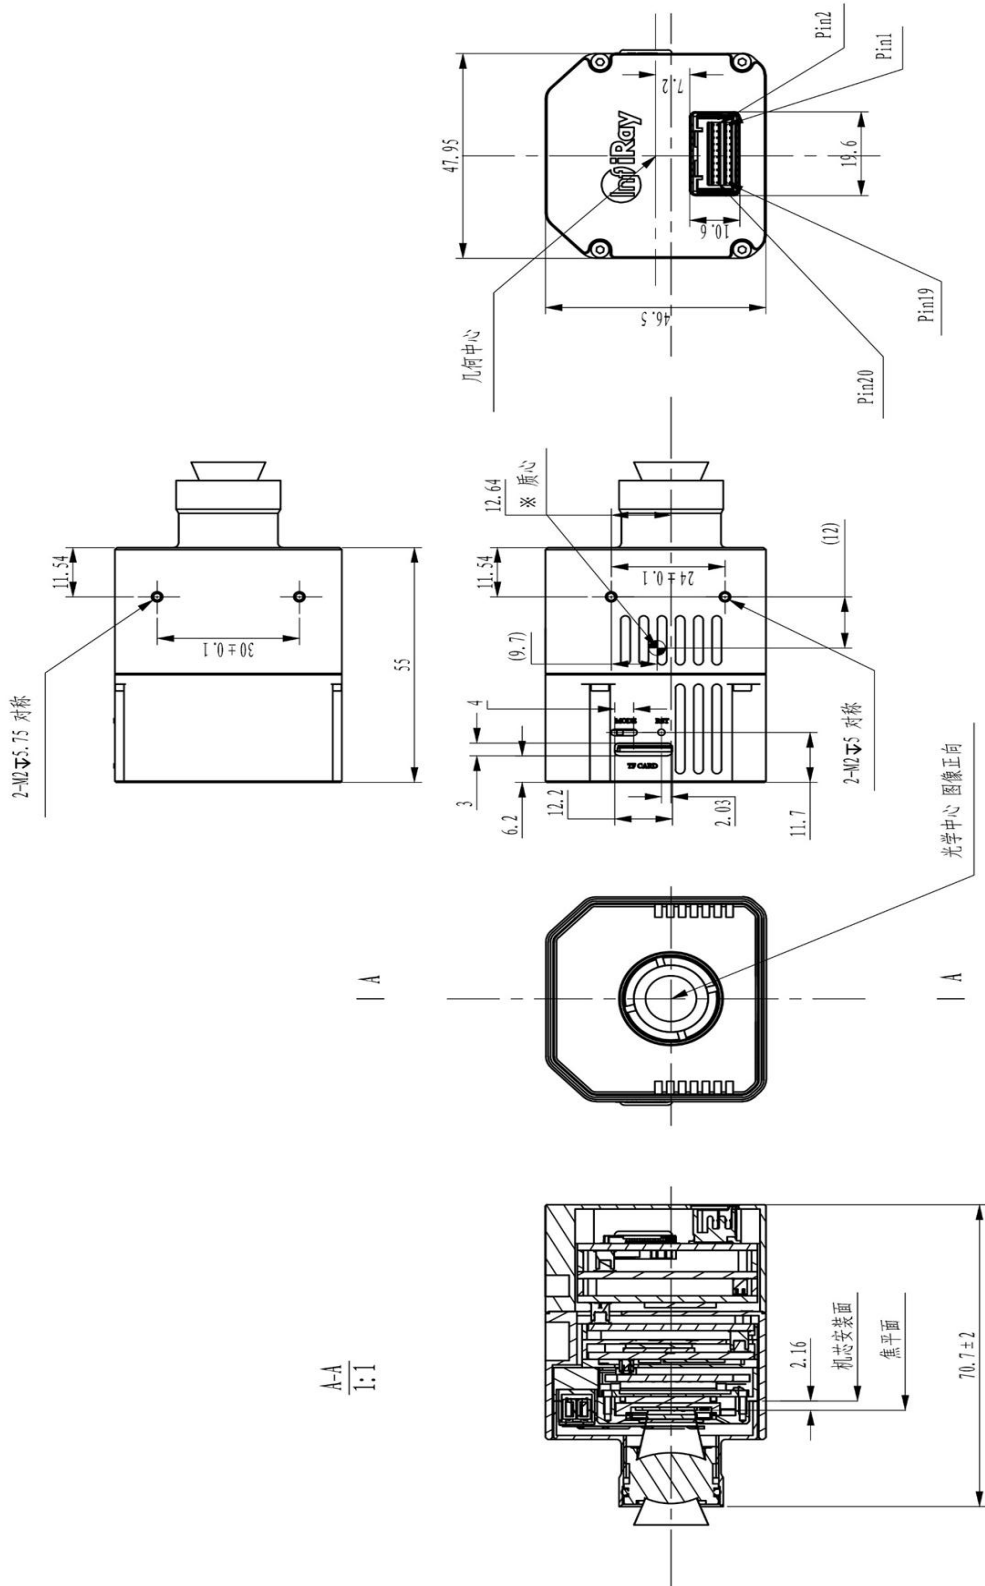


Figure14.1 MOLEX 503154-2090 User Interface

Pin No.	Pin Name	Type	Description
1	Video	Output	Analog Video
2、 9、 10	GND	Power	Signal GND
3	ALARM_OUT	Output	Alarm Output
4	ALARM_IN	Input	Alarm Input
5	RS485	Input/Output	PT Control Serial Port Passthrough
7	RS485		
6	RS232 TX		
8	RS232 RX		
11	TD3+(Network4)	Input/Output	Ethernet Signal
13	TD3-(Network 5)		
12	TD1+(Network 1)		
14	TD1-(Network 2)		
15	TD4+(Network 7)		
17	TD4-(Network 8)		
16	TD2+(Network 3)		
18	TD2-(Network 6)		
19	—	—	Null
20	PWR_IN	Power Input	Power

Table 14.1 Pin Definition of User Interface

15.Mechanical Drawings



16.Common Troubleshooting

Troubles	Possible Cause	Solutions
Images are blurred	No image calibration for a long time	Click the shutter correction button in the software
Camera can't be started	The supply voltage exceeds the normal working supply voltage range.	Check whether the power supply voltage is between 9 and 26V
	The power connector is loose.	Check whether the power cable is connected
Inaccurate temperature measurement	The stabilization time for thermal camera is too short.	Keep the thermal camera stable for more than 10 minutes.
Image is stuck.	Power cable or network cable connection is loose.	After checking the power supply and network cable connection, preview the images again.
Images cannot be previewed	The thermal camera is not connect with Internet or the network connection doesn't work.	Make sure the connection between the thermal camera and the network is working well.

Table 16.1 Product Common Troubleshooting

17.Cleaning Thermal Camera

17.1 Cleaning Camera Housing, Cables and Other Items

Camera Housing, Cables and Other Items	
Liquids	One of the following liquids can be used. <ol style="list-style-type: none">1.Warm water2.A Weak detergent solution
Cleaning Tools	A soft cloth
Cleaning Procedure	Please follow this procedure: <ol style="list-style-type: none">1.Soak a soft cloth in the liquid.2.Twist the cloth to remove excess liquid.3.Clean the camera parts with the cloth.

17.2 Cleaning Infrared Lens

Cleaning Infrared Lens	
Liquids	One of the following liquids can be used. 1. Commercial lens cleaning liquid with more than 30% is isopropyl alcohol. 2. 96% ethyl alcohol(C_2H_5OH).
Cleaning Tools	Dustless cloth, cotton wool
Cleaning Procedure	Please follow this procedure (Take dustless cloth as an example). 1. Soak the dustless cloth in the liquid. 2. Gently wipe the lens with the dustless cloth



CAUTION

The dustless cloth or cotton wool should be used one time only.

18. Terms and Definitions

Terms	Definition
FPA (Focal Plane Array)	A type of infrared detector
IFOV (Instantaneous Field of View)	A resolution measure method of infrared thermal camera (that is, the field of view of a pixel)
FOV (Field of View)	The angle of view that the infrared camera can see HFOV is the horizontal angle of FOV, VFOV is the vertical angle of FOV.
NETD (Noise Equivalent Temperature Difference)	A measure of image anti-interference level of infrared thermal camera.

Appendix A Emissivity of Common Materials

Material	Temperature (°C)	Emissivity
Water	0~100	0.95~0.98
Soil(dry)	20	0.92
Soil(wet)	20	0.95
Woods	17	0.962
Sand	20	0.9
Sandstone	19	0.909~0.935
PVC plastic	70	0.93
Asphalt	20	0.967
Paint	70	0.92~0.94
Wallpaper	20	0.85~0.90
Cloth	20	0.98
Concrete	20	0.92
Pavement surface	5	0.974
Smooth porcelain	20	0.92
Ceramic tile	17	0.94
Gypsum	17	0.86
Bricks	35	0.94
Hard rubber	0~100	0.89
Charcoal	20~400	0.95~0.97
Granite(rough)	20	0.879
Cold rolled steel	70	0.09
Oxidized steel	50	0.88
Copper	20	0.07
Oxidized copper	50	0.6~0.7

Worth comes from Service

24h Hotline:

400-998-3088

Technical Support

Hotline:

400-883-0800

Customized Services